

Kubota®

Construction service guide



For Earth, For Life
Kubota





K008-3



KX-Series



U-Series



K008-3








 


Kubota

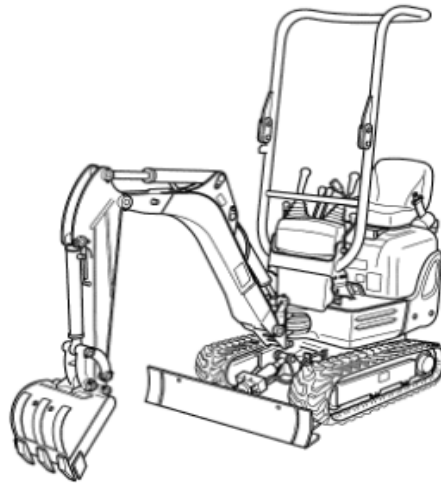Kubota UK Limited have provided this Quick Reference Chart (QRC) for the express use of Kubota Dealer personnel only. Its content may not be copied, altered or transferred to a third party without the express permission of Kubota UK Limited.

Please also note that although every effort has been made to ensure the information provided within this QRC is accurate, it is the dealers responsibility to ensure the items required, although identified within the QRC, are checked in K-Pad for their intended suitability.

K008-3
SERVICE GUIDE




Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.2L	Change every 500 hours	SAE 10W30 CF/CF-4	
Engine oil filter	1	Change every 500 hours	W21ESO1520	
Fuel filter inline	1	Change every 500 hours	1T02143560	
Air filter outer	1	Change every 1000 hours	6C06099410	
Airfilter inner	1	Change every 1000 hours	3272158242	
HYD filter	1	Change every 1000 hours	RA02162150	
HYD filter	1	Change every 1000 hours	RA01162190	
Fan belt	1		1689797010	
Hydraulic fluid	18L	Change every 1000 hours	ISOVG46	
Coolant	3.3L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	






 


KX-SERIES

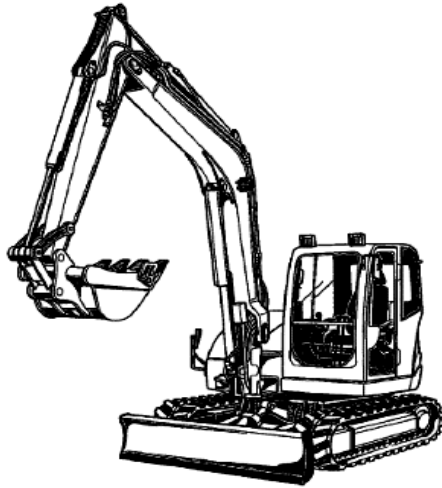


Kubota®








KX080-3
SERVICE GUIDE

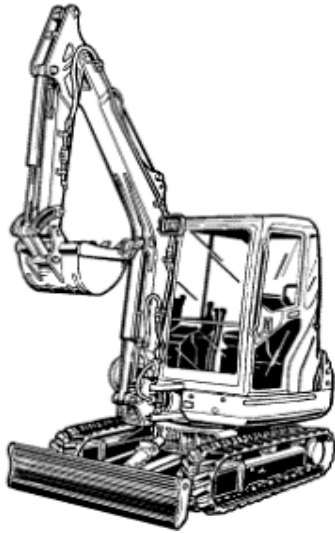


Item	Capacity/quantity	Change interval	Part number	
Engine oil	10.8L	Replace every 500 hours	SAE 10W30 CF-4	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Fuel filter	1	Replace every 500 hours	RB10151280	
Air filter outer	1	Replace every 1000hrs	5980026110	
Air filter inner	1	Replace every 1000hrs	3A11119130	
Hydraulic filter	1	Replace every 1000hrs	RD80962240	
Hydraulic filter	1	Replace every 1000hrs	RD80962130	
Hydraulic filter	1	Replace every 1000hrs	R141164930	
Hydraulic fluid	146L	Replace every 1000hrs	ISOVG46	
Fan belt	1		1G54197010	
Air con belt	1		RD80942780	
Coolant	11.8L	Replace every 1000hrs	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	





 


**KX36-3
SERVICE GUIDE**

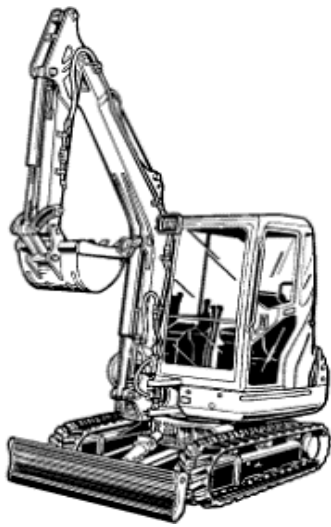


Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.6L	After the first 50 hours Replace every 250 hours	15W-40 API CI-4	
Engine oil filter	1	After the first 50 hours	W21ESO1500	
		Replace every 250 hours		
Fuel filter	1	Replace every 500 hours	RA21151280	
Air filter outer	1	Replace every 1000hours	6C0699410	
Airfilter inner	1	Replace every 1000hours	3272158242	
Hydraulic filter	1	Replace every 1000hours	RG13862150	
Hydraulic filter	1	Replace every 1000hours	RG13662190	
Hydraulic fluid	27L	Replace every 1000hours	ISO46	
Fan belt	1		1G82097010	
Coolant	2.7L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	


 



 

KX41-3
SERVICE GUIDE




Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.6L	After the first 50 hours Replace every 250 hours	15W-40 API CI-4	
Engine oil filter	1	After the first 50 hours	W21ESO1500	
		Replace every 250 hours		
Fuel filter	1	Replace every 500 hours	RA21151280	
Air filter outer	1	Replace every 1000hours	6C0699410	
Airfilter inner	1	Replace every 1000hours	3272158242	
Hydraulic filter	1	Replace every 1000hours	RG13862150	
Hydraulic filter	1	Replace every 1000hours	RG13662190	
Hydraulic fluid	27L	Replace every 1000hours	ISO46	
Fan belt	1		1G82097010	
Coolant	2.9L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

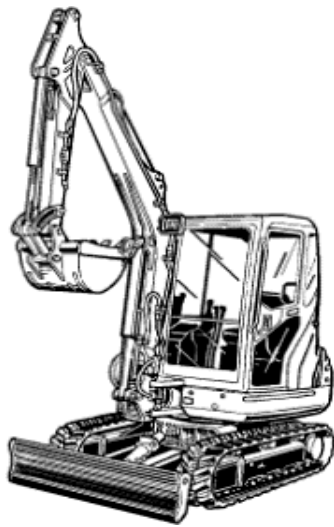




 

**KX61-3
SERVICE GUIDE**

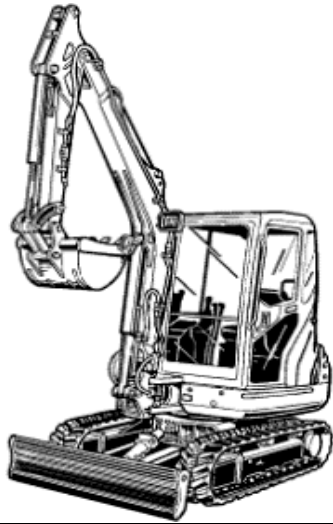


Item	Capacity/quantity	Change interval	Part number	
Engine oil	4.5L (without filter)	Replace every 500 hours	SAE10W30 (CD)	
Engine oil filter	1	Replace every 500 hours	W21ESO1600	
Fuel filter	1	Replace every 500 hours	RA21151280	
Air filter outer	1	Replace every 1000 hours	TC02016320	
Airfilter inner	1	Replace every 1000 hours	T027093220	
Hydraulic filter	1	Replace every 1000 hours	RG23862190	
Hydraulic filter	1	Replace every 1000 hours	6948162210	
Hydraulic fluid	53L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1624197010	
Coolant	6.5L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	






 


**KX71-3
SERVICE GUIDE**

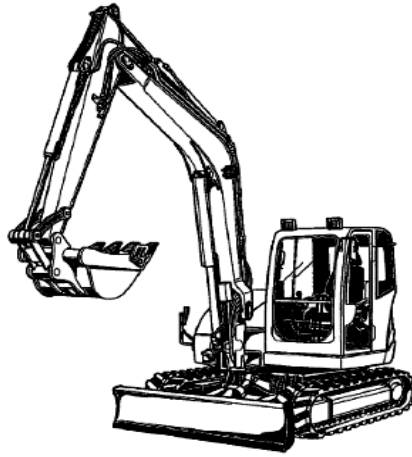


Item	Capacity/quantity	Change interval	Part number	
Engine oil	4.5L (without filter)	Replace every 500 hours	SAE10W30 (CD)	
Engine oil filter	1	Replace every 500 hours	W21ESO1600	
Fuel filter	1	Replace every 500 hours	RA21151280	
Air filter outer	1	Replace every 1000 hours	TC02016320	
Airfilter inner	1	Replace every 1000 hours	T027093220	
Hydraulic filter	1	Replace every 1000 hours	RG23862190	
Hydraulic filter	1	Replace every 1000 hours	6948162210	
Hydraulic fluid	53L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1624197010	
Coolant	6.5L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	







 

KX080-3a
SERVICE GUIDE

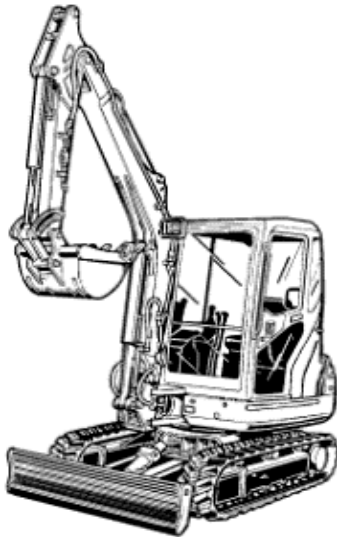


Item	Serial number	Capacity/quantity	Change interval	Part number	
Engine oil		10.8L	Replace every 500 hours	SAE 10W30 CF-4	
Engine oil filter		1	Replace every 500 hours	W21ESO1C00	
Fuel filter		1	Replace every 500 hours	W21ESF1660	
Fuel filter	S/N: <21704 S/N: >21705	1	Replace every 500 hours	RB10151280 RD81951280	
Air filter outer		1	Replace every 1000hrs	5980026110	
Air filter inner		1	Replace every 1000hrs	3A11119130	
Hydraulic filter		1	Replace every 1000hrs	RD80962240	
Hydraulic filter		1	Replace every 1000hrs	RD80962130	
Hydraulic filter		1	Replace every 1000hrs	R141164390	
Hydraulic fluid		146L	Replace every 1000hrs	ISOVG46	
Fan belt		1		1G77297010	
Aircon belt	S/N: <22294 S/N: >22295	1		RD81942782 RD81942790	
Coolant		11.8L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	







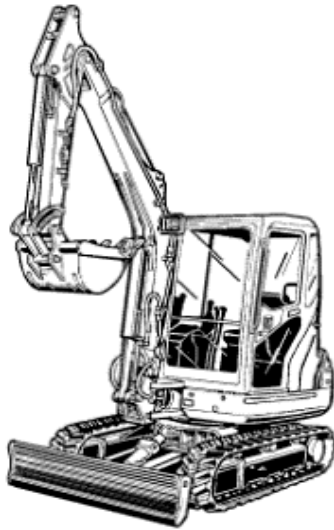

KX161-3a
SERVICE GUIDE




Item	Capacity/quantity	Change interval	Part number	
Engine oil	8.5L	After the first 50 hours Replace every 100 hours	SAE 10W30 (CF/CF-4)	
Engine oil filter	1	After the first 50 hours Replace every 100 hours	W21ESO1510	
Fuel filter	1	Replace every 400 hours	1522143170	
Air filter outer	1	Replace every year	R140142270	
Airfilter inner	1	Replace every year	R240142280	
Hydraulic filter	1	Replace every 1000 hours	RD41162210	
Hydraulic filter	1	Replace every 1000 hours	RD43162122	
Hydraulic filter	1	Replace every 1000 hours	RD40161270	
Hydraulic fluid	75L	Replace every 1000 hours	ISOVG46	
Fan belt	1	With A/C Without A/C	1546997010 1711197010	
Air con belt	1		RD11849120	
Coolant	8.5L	Every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

 

 



KX121-3a
SERVICE GUIDE




Item	Capacity/quantity	Change interval	Part number	
Engine oil	8.5L	After the first 50 hours Replace every 100 hours	SAE 10W30 (CF/CF-4)	
Engine oil filter	1	After the first 50 hours Replace every 100 hours	W21ESO1510	
Fuel filter	1	Replace every 400 hours	1522143170	
Air filter outer	1	Replace every year	R140142270	
Airfilter inner	1	Replace every year	R240142280	
Hydraulic filter	1	Replace every 1000 hours	RD41162210	
Hydraulic filter	1	Replace every 1000 hours	RD43162122	
Hydraulic filter	1	Replace every 1000 hours	RD40161270	
Hydraulic fluid	75L	Replace every 1000 hours	ISOVG46	
Fan belt	1	With A/C Without A/C	1546997010 1711197010	
Air con belt	1		RD11849120	
Coolant	8.5L	Every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

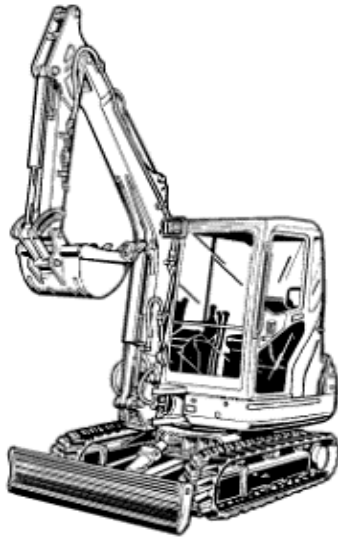

 



KX91-3a2
SERVICE GUIDE

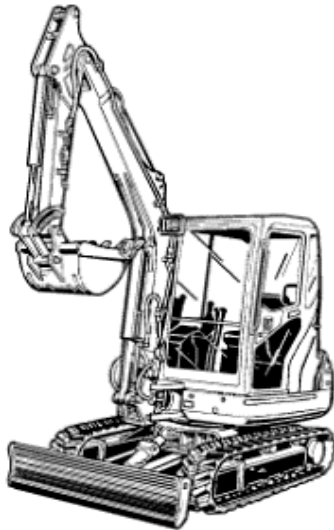


Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.3L	Replace every 500 hours	SAE10W30 (CD)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every year	TC02016320	
Airfilter inner	1	Replace every year	T027093220	
Hydraulic filter	1	Replace every 1000 hours	6948162210	
Hydraulic filter	1	Replace every 1000 hours	RG23862190	
Hydraulic fluid	55L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1546997010	
Coolant	8.9L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

KX101-3a2
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.3L	Replace every 500 hours	SAE10W30 (CD)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every year	TC02016320	
Airfilter inner	1	Replace every year	T027093220	
Hydraulic filter	1	Replace every 1000 hours	6948162210	
Hydraulic filter	1	Replace every 1000 hours	RG23862190	
Hydraulic fluid	55L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1547197010	
Coolant	8.9L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

**KX080-4
SERVICE GUIDE**

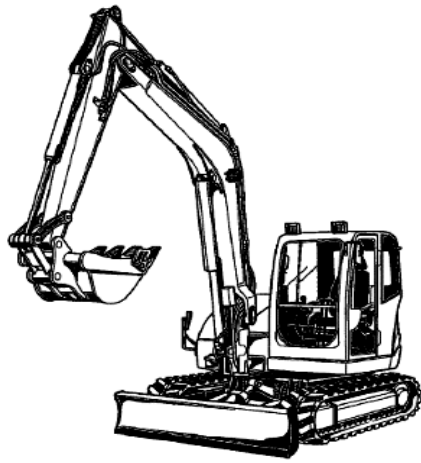
 

 


 



Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.7L	Replace every 500 hours	API CJ-4	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	HHV0051920	
Fuel filter	1	Replace every 500 hours	RD81951280	
Air filter outer	1	Replace every 1000 hours	5980026110	
Airfilter inner	1	Replace every 1000 hours	3A11119130	
Hydraulic filter	1	After the first 250 hours Replace every 500 hours	RD80962130	
Hydraulic filter	1	After the first 250 hours Replace every 500 hours	RD80962240	
Hydraulic filter	1	After the first 250 hours Replace every 500 hours	R141164930	
Hydraulic fluid	146L	After the first 250 hours Replace every 500 hours	Tellus oil S2M46	
Fan belt	1		1G77297010	
Air con belt			RD81942782	
Coolant	10.5L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

Under very dusty conditions, the air filter and the interior air filter must be cleaned more frequently or replaced.
 When using a breaker over 20 % → every 800 h.
 When using a breaker over 40 % → every 400 h.
 When using a breaker over 60 % → every 300 h.
 When using a breaker over 80 % → every 200 h.
 Earlier if necessary.
 At least annually.




 


 

**KX015-4
SERVICE GUIDE**



Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.6L	Replace every 500 hours	SAE 10W-30	
Engine oil filter	1	Replace every 500 hours	W21ESO1500	
Fuel pre filter	1	Replace every 500 hours	RD81951280	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	RG15842930	
Airfilter inner	1	Replace every 1000 hours	RG15842920	
HYD filter	1	Replace every 1000 hours	RG13662190	
HYD filter	1	Replace every 1000 hours	RG13862150	
Hydraulic fluid	28L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	2.9L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	




 


 
 
**KX016-4
SERVICE GUIDE**



Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.6L	Replace every 500 hours	SAE 10W-30	
Engine oil filter	1	Replace every 500 hours	W21ESO1500	
Fuel pre filter	1	Replace every 500 hours	RD81951280	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	RG15842930	
Airfilter inner	1	Replace every 1000 hours	RG15842920	
HYD filter	1	Replace every 1000 hours	RG13662190	
HYD filter	1	Replace every 1000 hours	RG13862150	
Hydraulic fluid	28L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	2.9L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	







 

**KX018-4
SERVICE GUIDE**




Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.6L	Replace every 500 hours	SAE 10W-30	
Engine oil filter	1	Replace every 500 hours	W21ESO1500	
Fuel pre filter	1	Replace every 500 hours	RD81951280	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	RG15842930	
Airfilter inner	1	Replace every 1000 hours	RG15842920	
HYD filter	1	Replace every 1000 hours	RG13662190	
HYD filter	1	Replace every 1000 hours	RG13862150	
Hydraulic fluid	28L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	2.9L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

KX019-4
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.6L	Replace every 500 hours	SAE 10W-30	
Engine oil filter	1	Replace every 500 hours	W21ESO1500	
Fuel pre filter	1	Replace every 500 hours	RD81951280	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	RG15842930	
Airfilter inner	1	Replace every 1000 hours	RG15842920	
HYD filter	1	Replace every 1000 hours	RG13662190	
HYD filter	1	Replace every 1000 hours	RG13862150	
Hydraulic fluid	28L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	2.9L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

KX057-4
SERVICE GUIDE

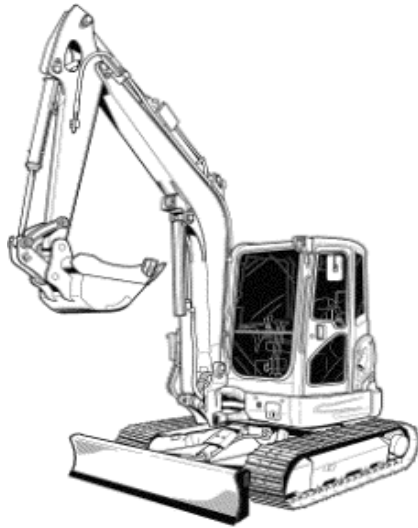


Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.0L	Replace every 500 hours	SAE 10W-30 (CF OR CI-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel pre filter	1	Replace every 500 hours	RD45151940	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	RD45242270	
Airfilter inner	1	Replace every 1000 hours	RD45242280	
HYD filter	1	Replace every 1000 hours	RD45162120	
HYD filter	1	Replace every 1000 hours	RD45162210	
HYD filter	1	Replace every 1000 hours	R141164930	
Hydraulic fluid	79L	Replace every 1000 hours	ISOVG46	
Fan belt	1	Exc A/C With A/C	1J73197010 1G77297010	
Air con belt	1		RD45153790	
Coolant	8.1L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	







 
U-SERIES

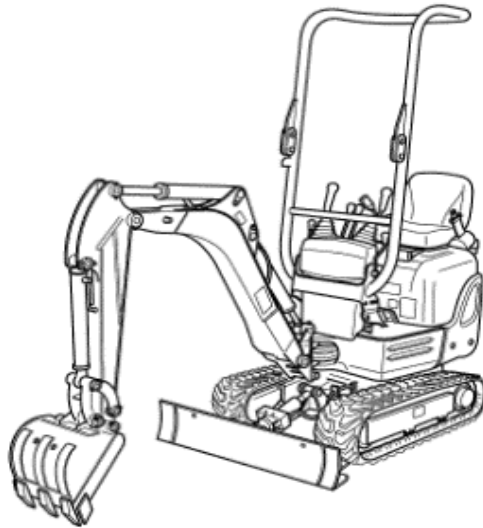


Kubota®





 

 
U10-3
SERVICE GUIDE

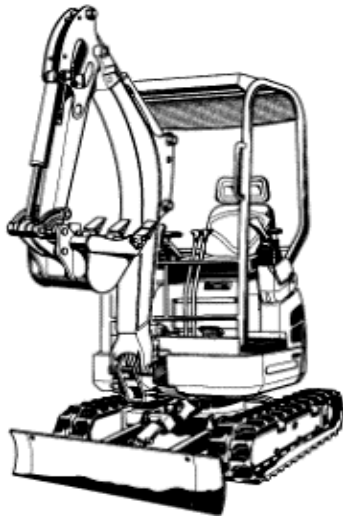

Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.2L	Change every 500 hours	SAE 10W30 CF/CF-4	
Engine oil filter	1	Change every 500 hours	W21ESO1520	
Fuel filter	1	Change every 500 hours	1T02143560	
Air filter outer	1	Change every 1000 hours	6C06099410	
Airfilter inner	1	Change every 1000 hours	3272158242	
HYD filter	1	Change every 1000 hours	RA02162150	
HYD filter	1	Change every 1000 hours	RA01162190	
Fan belt	1		1689797010	
Hydraulic fluid	18L	Change every 1000 hours	ISOVG46	
Coolant	3.3L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	








**U15-3
SERVICE GUIDE**




Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.5L	Replace every 500 hours	10W-30 Class CC	
Engine oil filter	1	Replace every 500 hours	W21ESO1520	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	6C06099410	
Airfilter inner	1	Replace every 1000 hours	3272158242	
HYD filter	1	Replace every 1000 hours	RA01162190	
HYD filter	1	Replace every 1000 hours	RB23862150	
Hydraulic fluid	13L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	3.3L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 




U17-3a
SERVICE GUIDE

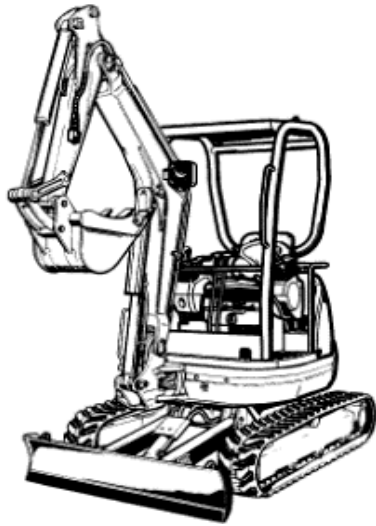


Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.6L	Replace every 500 hours	10W-30 (CF/CF-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1500	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	6C06099410	
Airfilter inner	1	Replace every 1000 hours	3272158242	
HYD filter	1	Replace every 1000 hours	RB23862150	
HYD filter	1	Replace every 1000 hours	RA01162190	
Hydraulic fluid	21L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1G82097010	
Coolant	3.1L	Change every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 




U20-3a
SERVICE GUIDE

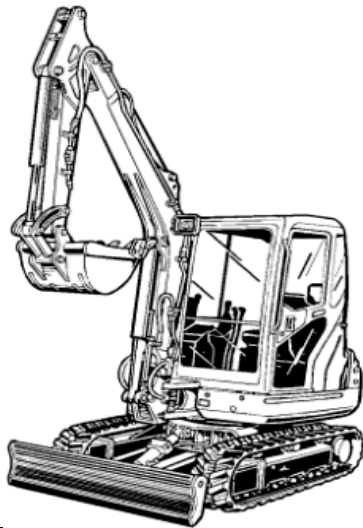


Item	Capacity/quantity	Change interval	Part number	
Engine oil	4.4L	Replace every 500 hours	SAE 10W-30 (CF-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1530	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every 1000 hours	6C06099410	
Airfilter inner	1	Replace every 1000 hours	3272158242	
HYD filter	1	Replace every 1000 hours	RB41162190	
HYD filter	1	Replace every 1000 hours	RB41162150	
Hydraulic fluid		Replace every 1000 hours	ISOVG46	
Fan belt	1		1624197013	
Coolant	3.6L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 



 
U35-3a
SERVICE GUIDE

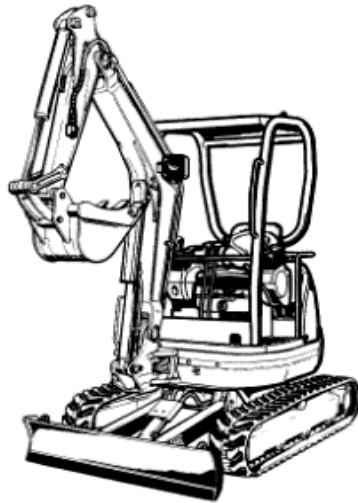


Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.3L	Replace every 500 hours	SAE10W30 (CD)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace every year	TC02016320	
Airfilter inner	1	Replace every year	T027093220	
Hydraulic filter	1	Replace every 1000 hours	6948162210	
Hydraulic filter	1	Replace every 1000 hours	RG23862190	
Hydraulic fluid	55L	Replace every 1000 hours	ISOVG46	
Fan belt	1		1546997010	
Coolant	8.9L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 



U25-3a
SERVICE GUIDE

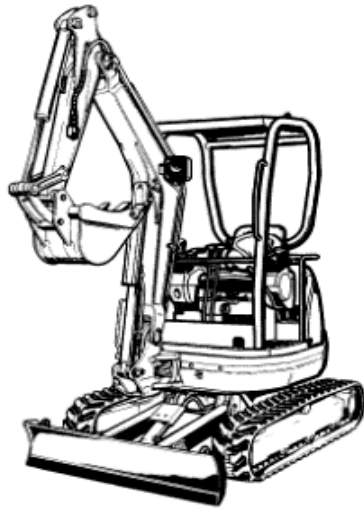


Item	Capacity/quantity	Change interval	Part number	
Engine oil	4.4L	Replace every 500 hours	SAE 10W-30 (CF-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace 1000 hours	TC02016320	
Airfilter inner	1	Replace 1000 hours	T027093220	
HYD filter	1	Replace 1000 hours	RB41162150	
HYD filter	1	Replace 1000 hours	RB41162190	
Hydraulic fluid	37L	Replace 1000 hours	ISOVG46	
Fan belt	1		1624197013	
Coolant	3.6L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 



U45-3a
SERVICE GUIDE

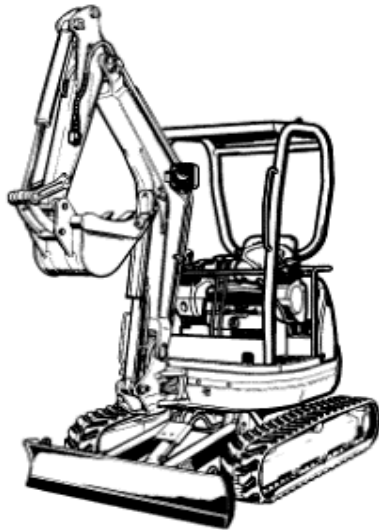


Item	Capacity/quantity	Change interval	Part number	
Engine oil	8.5L	After the first 50 hours Replace every 100 hours	SAE 10W30 (CF/CF-4)	
Engine oil filter	1	After the first 50 hours Replace every 100 hours	W21ESO1510	
Fuel filter	1	Replace every 400 hours	1522143170	
Air filter outer	1	Replace 1000 hours	R140142270	
Airfilter inner	1	Replace 1000 hours	R240142280	
Hydraulic filter	1	Replace 1000 hours	RD41162210	
Hydraulic filter	1	Replace 1000 hours	RD43162122	
Hydraulic filter	1	Replace 1000 hours	RD40161270	
Hydraulic fluid	75L	Replace 1000 hours	ISOVG46	
Fan belt	1	Without A/C	1711197010	
		With A/C	1546997010	
Air con belt	1		RD11849120	
Coolant	8.5L	Every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	








U50-3a
SERVICE GUIDE

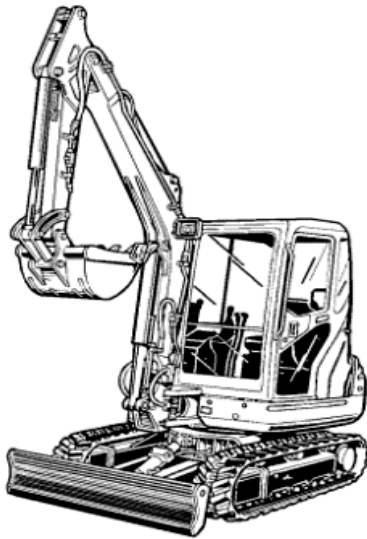


Item	Capacity/quantity	Change interval	Part number	
Engine oil	8.5L	After the first 50 hours Replace every 100 hours	SAE 10W30 (CF/CF-4)	
Engine oil filter	1	After the first 50 hours Replace every 100 hours	W21ESO1510	
Fuel filter	1	Replace every 400 hours	1522143170	
Air filter outer	1	Replace 1000 hours	R140142270	
Airfilter inner	1	Replace 1000 hours	R240142280	
Hydraulic filter	1	Replace 1000 hours	RD41162210	
Hydraulic filter	1	Replace 1000 hours	RD43162122	
Hydraulic filter	1	Replace 1000 hours	RD40161270	
Hydraulic fluid	75L	Replace 1000 hours	ISOVG46	
Fan belt	1	Without A/C	1711197010	
		With A/C	1546997010	
A/C belt	1		RD11849120	
Coolant	8.5L	Every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	



 





U35-3a2
SERVICE GUIDE

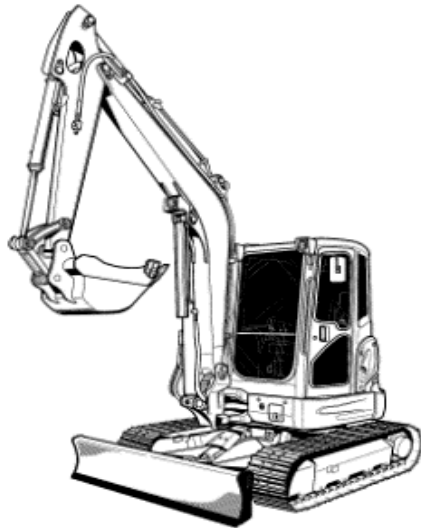


Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.3L	Replace every 500 hours	SAE 10W-30 (CF or CI-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace 1000 hours	TC02016320	
Airfilter inner	1	Replace 1000 hours	T027093220	
HYD filter	1	Replace 1000 hours	RG23862190	
HYD filter	1	Replace 1000 hours	6948162210	
Hydraulic fluid	55L	Replace 1000 hours	ISOVG46	
Fan belt	1		1547197010	
Coolant	7.2L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

 
 
 
 





U48-4
SERVICE GUIDE

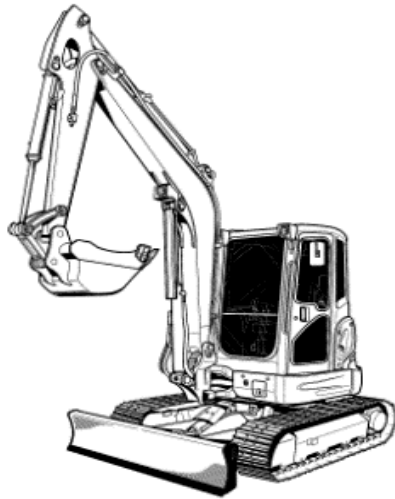

Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.0L	Replace every 500 hours	SAE 10w-30 (CF or CI-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Air filter outer	1	Replace 1000 hours	RD45242270	
Airfilter inner	1	Replace 1000 hours	RD45242280	
HYD filter	1	Replace 1000 hours	RD45162120	
HYD filter	1	Replace 1000 hours	RD45162210	
HYD filter	1	Replace 1000 hours	R141164930	
Hydraulic fluid	79L	Replace 1000 hours	ISOVG46	
Fan belt	1	V2607-E3-BH-6	1J73197010	
		V2607-E3-BH-4	1G77297010	
A/C belt	1		RD45153790	
Coolant	8.9L	Repalce every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	

**U55-4
SERVICE GUIDE**



Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.0L	Replace every 500 hours	SAE 10w-30 (CF or CI-4)	
Engine oil filter	1	Replace every 500 hours	W21ESO1C00	
Fuel filter	1	Replace every 500 hours	1522143170	
Fuel pre-filter	1	Replace every 500 hours	RD45151940	
Air filter outer	1	Replace 1000 hours	RD45242270	
Airfilter inner	1	Replace 1000 hours	RD45242280	
HYD filter	1	Replace 1000 hours	RD45162120	
HYD filter	1	Replace 1000 hours	RD45162210	
HYD filter	1	Replace 1000 hours	R141164930	
Hydraulic fluid	79L	Replace 1000 hours	ISOVG46	
Fan belt	1	V2607-DI-E3-BH-5	1J73197010	
		V2607-DI-E3-BH-3	1G77297010	
A/C belt	1		RD45153790	
Coolant	8.9L	Replace every 2 years	Antifreeze Kubota LLC-N-50F Mixture ratio 50%	