

Kubota®

Tractor and ground-care service guide



For Earth, For Life
Kubota





G and GR-Series



F-Series



Zero turn machines



T-Series



B-Series



STV-Series



L-Series



M-Series



RTV-Series

Kubota®




For Earth, For Life
Kubota







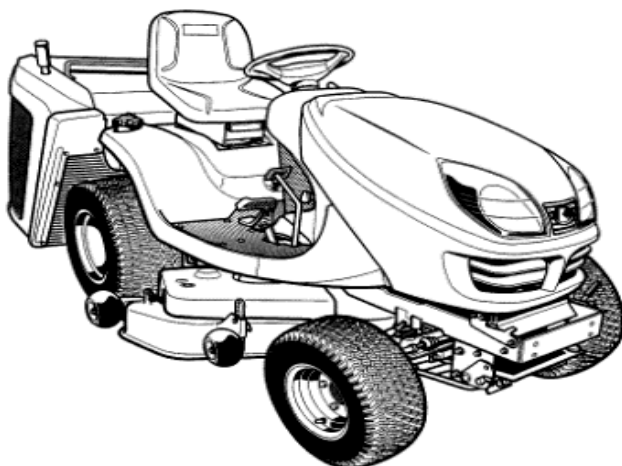

Kubota UK Limited have provided this Quick Reference Chart (QRC) for the express use of Kubota Dealer personnel only. Its content may not be copied, altered or transferred to a third party without the express permission of Kubota UK Limited.


Please also note that although every effort has been made to ensure the information provided within this QRC is accurate, it is the dealers responsibility to ensure the items required, although identified within the QRC, are checked in K-Pad for their intended suitability.







GR2100EC2
Service chart

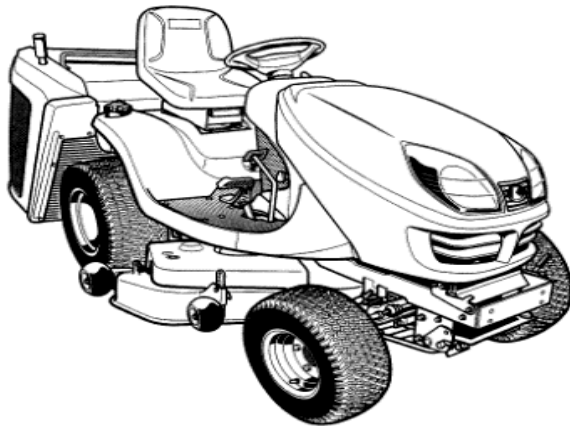

Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission case fluid	3.3L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.35L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1581197010	


GR1600EU-2
Service chart







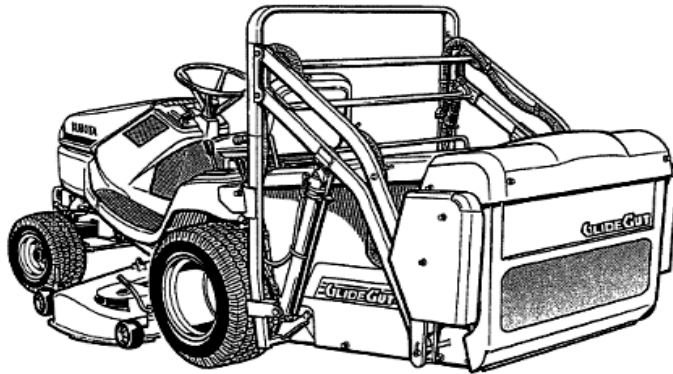

Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.2L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission fluid	2.8L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	

G18/G18HD
Service Chart







if quantities incorrect need to check




Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.6L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission fluid	(G18) 4.5L (G18HD) 6.0L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Replace every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	







G21-2LD/HD
Service chart

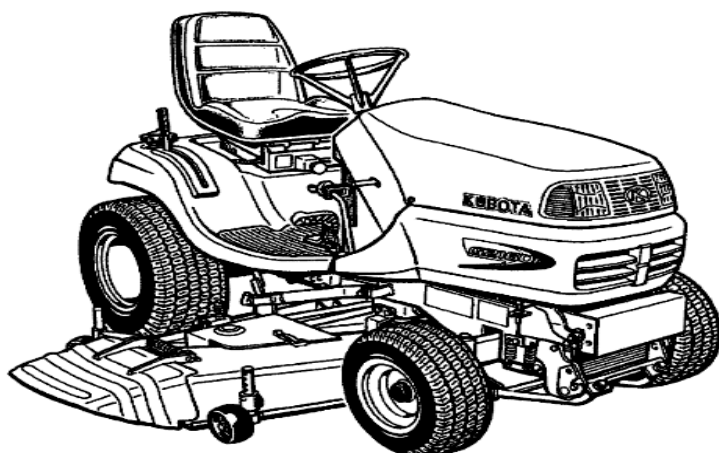


Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	2	Every 500 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHK200	
Transmission fluid	4.5L LD/6.0L HD	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	







G2160
Service chart

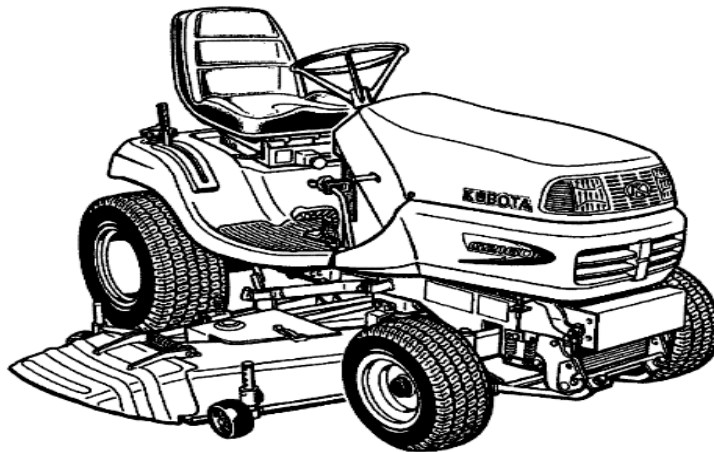


Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission fluid	4.5L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	







G2160-2
Service chart

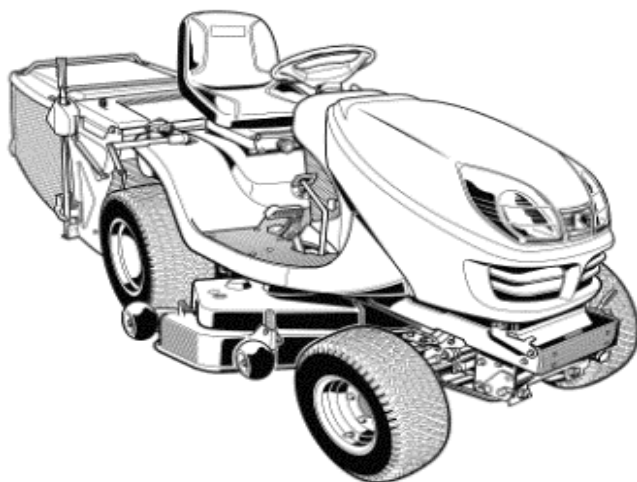

Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission fluid	4.5L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	

GR2120
Service chart




Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Every 400 hrs	1258143013	
Air filter	1	Clean every 50hrs Replace every year	K121182320	
HST return filter	1	After the first 50 hrs of operation Every 100 hrs	W21TSHK200	
Transmission fluid	3.3L	After the first 50 hrs of operation Every 400 hrs	SUPER UDT	
Coolant	2.1L	Every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	



 





Kubota®

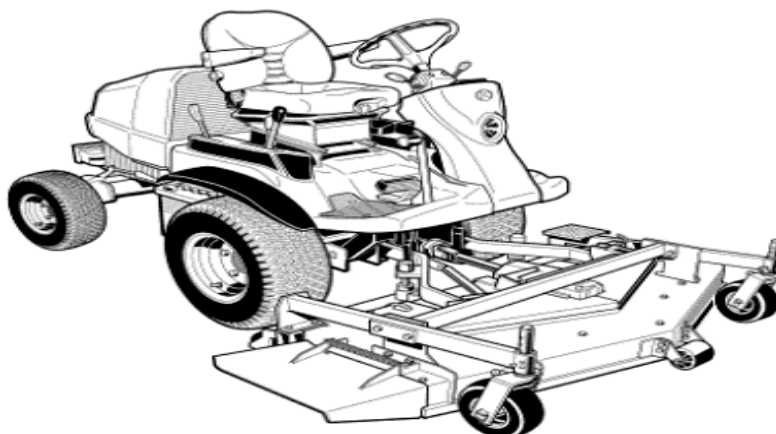




 
 




For Earth, For Life
Kubota

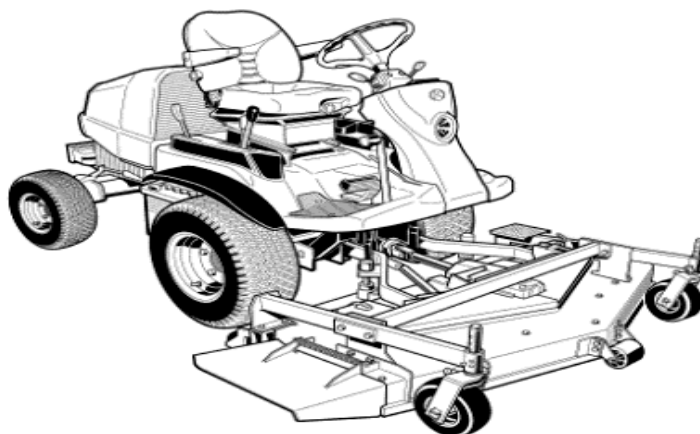

F2880**Service chart**

Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.5L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1530	
Fuel filter	1	Check every 100 hrs Replace Every 400 hrs	1258143013	
Air filter outer	1	Clean every 50 hrs Replace Every year	6C06099410	
Air filter inner	1	Clean every 50 hrs Replace Every year	3272158242	
HST return filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSH6600	
HST filter SUC	1	Clean every 200 hrs Replace Every year	6602136390	
Transmission fluid	14L	Change every 200 hrs	SUPER UDT	
Coolant	4.6L	Change every year	Anti-freeze + clean water mix	
Fan belt	1		1G06297012	

F3680**Service chart**

Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.0L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1600	
Fuel filter	1	Check every 100 hrs Replace Every 400 hrs	1258143013	
Air filter outer	1	Clean every 50 hrs Replace Every year	6C06099410	
Air filter inner	1	Clean every 50 hrs Replace Every year	3272158242	
HST return filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSH6600	
HST filter SUC	1	Clean every 200 hrs Replace Every year	6602136390	
Transmission fluid	14L	Change every 200 hrs	SUPER UDT	
Coolant	4.6L	Change every year	Anti-freeze + clean water mix	
Fan belt	1		1G06297012	

Kubota®









For Earth, For Life
Kubota










GZD15-II
Service chart

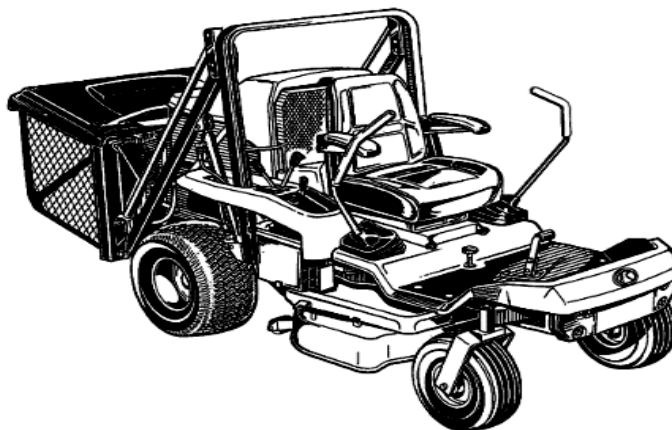



 
 


 


Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.1L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Check every 100 hrs Replace Every 400 hrs	1258143013	
Air filter outer	1	Clean every 50 hrs Replace Every year	6C06099410	
HST return filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHK200	
Transmission fluid	10L	Change every 200 hrs	SUPER UDT	
Coolant	1.4L	Change every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	

GZD21
Service chart

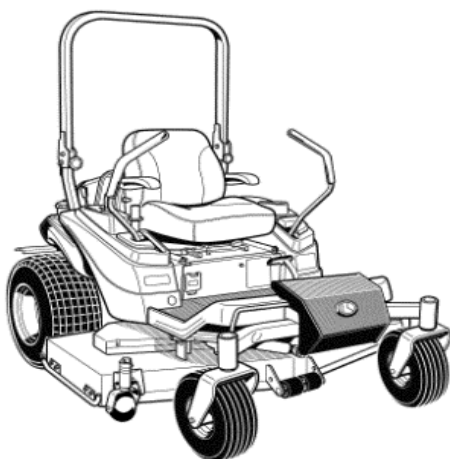

Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.8L	After the first 50 hrs of operation Every 100 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 100 hrs	W21ESO1500	
Fuel filter	2	Check every 100 hrs Replace Every 400 hrs	1258143013	
Air filter	1	Clean every 50 hrs Replace Every year	6C06099410	
HST return filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHK200	
Transmission fluid	10L	Change every 200 hrs	SUPER UDT	
Coolant	1.9L	Change every year	Anti-freeze + clean water mix	
Fan belt	1		1588197010	

ZD326**Service chart**

Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.9L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1530	
Fuel filter	2	Check every 100 hrs Replace every 400 hrs	1258143013	
Air filter outer	1	Clean every 100 hrs Replace every year	K318182240	
Air filter inner	1	Clean every 100 hrs Replace every year	K318182250	
Hydraulic pipe filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHK700	
Charge pump filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSH3A10	
Transmission fluid	12.1L	Change every 400 hrs	SUPER UDT	
Coolant	3.5	Change every year	Anti-freeze + clean water mix	
Fan belt	1		1628297013	


Kubota®




 





For Earth, For Life
Kubota

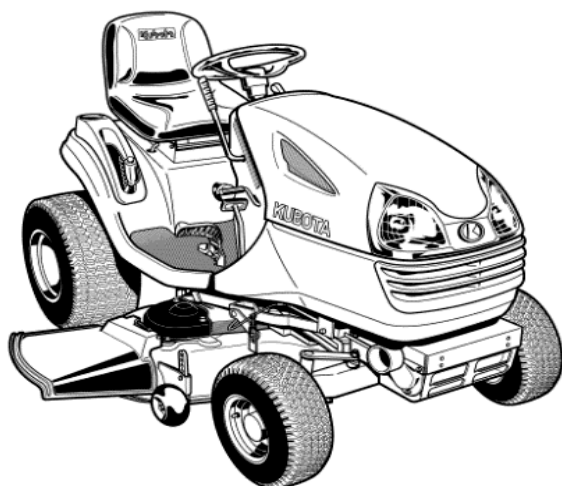









T1880EU-2
Service guide

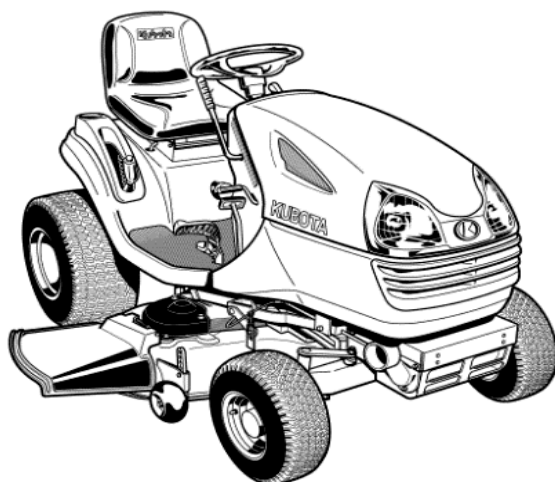

Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.5L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	E719432112	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	E718782150	
Air filter outer	1	Clean every 100 hrs Replace every year	E718710040	
Air filter inner	1	Clean every 100 hrs Replace every year	E718710030	
HST filter	1	After the first 50 hrs of operation Every 200 hrs	K104281080	
Transmission fluid	2.7-2.75L	Change every 400 hrs	SUPER UDT	
Belt	1		K102326130	

T1880
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.5L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	E719432112	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	E718782150	
Air filter outer	1	Clean every 100 hrs Replace every year	E718710040	
Air filter inner	1	Clean every 100 hrs Replace every year	E718710030	
HST filter	1	After the first 50 hrs of operation Every 200 hrs	K104281080	
Transmission fluid	2.7-2.75L	Change every 400 hrs	SUPER UDT	
Belt	1		K102326130	

Kubota®









For Earth, For Life
Kubota









B1220
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.6L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	6A32059930	
Air filter	1	Check every 100 hrs Replace every year	6C06099410	
Hydraulic filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6700	
Transmission fluid	10.5L	Replace every 400 hrs	SUPER UDT	
Coolant	3.4L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1588197010	







B1620
Service guide




Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.4L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	6A32059930	
Air filter	1	Check every 100 hrs Replace every year	6C06099410	
Hydraulic filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6700	
Transmission fluid	10.5L	Replace every 400 hrs	SUPER UDT	
Coolant	3.4L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1588197010	







B1820
Service guide

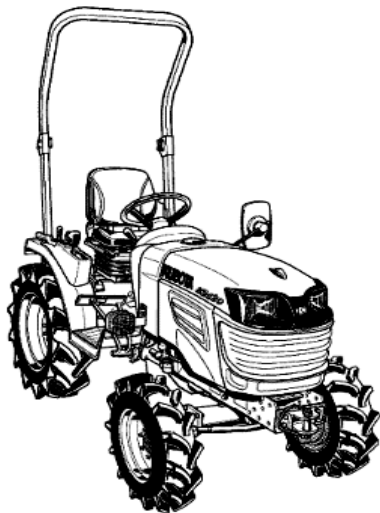

Item	Capacity/quantity	Change interval	Part number	
Engine oil	2.4L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	6A32059930	
Air filter	1	Check every 100 hrs Replace every year	6C06099410	
Hydraulic filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6700	
Transmission fluid	10.5L	Replace every 400 hrs	SUPER UDT	
Coolant	3.4L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1588197010	

B2420
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.1L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1500	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	6A32059930	
Air filter	1	Check every 100 hrs Replace every year	6C06099410	
Hydraulic filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6700	
Transmission fluid	14L	Replace every 400 hrs	SUPER UDT	
Coolant	3.9L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1G87997012	

Kubota®







 


For Earth, For Life
Kubota





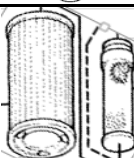




STV32
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	6.7L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1627143560	
Air filter outer	1	Clean every 100 hrs Replace every year	TC02016320	
Air filter inner	1	Clean every 100 hrs Replace every year	T027093220	
HST oil filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSH3A10	
Hydraulic pipe filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6600	
Transmission fluid	20L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.1L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1546997010	

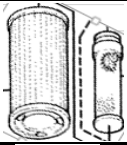






STV36
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	6.7L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1627143560	
Air filter outer	1	Clean every 100 hrs Replace every year	TC02016320	
Air filter inner	1	Clean every 100 hrs Replace every year	T027093220	
HST oil filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSH3A10	
Hydraulic pipe filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6600	
Transmission fluid	20L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.1L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1546997010	

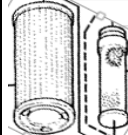STV40
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	6.7L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1627143560	
Air filter outer	1	Clean every 100 hrs Replace every year	TC02016320	
Air filter inner	1	Clean every 100 hrs Replace every year	T027093220	
Hydraulic oil filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSH3A10	
Hydraulic pipe filter	1	After the first 50 hrs of operation Replace every 400 hrs	W21TSH6600	
Transmission fluid	20L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.1L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1546997010	

Kubota®









For Earth, For Life
Kubota





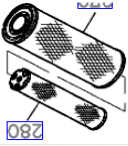



L3200
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	5.7	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	6A32059930	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSH3A00	
Transmission fluid	27.5L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.0L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1			



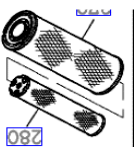




L4100H
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	7.6L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSHTA10	
Transmission fluid	40L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.5L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1547197010	

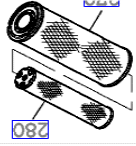





L4100DT
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	7.6L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
HST filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSHTA20	
Hydraulic filter	1	After the first 50 hrs of operation Every 400 hrs	W21TSHTA10	
Transmission fluid	40L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	6.5L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1547197010	



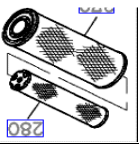



L3540
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	6.7L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHTA10	
Transmission fluid	42L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	7.5L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1546997010	



 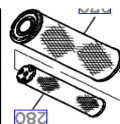



L4240
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	8.2L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHTA10	
Transmission fluid	43L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	7.5L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1546997010	



 



L5240HST-C
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.4L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHTA10	
Transmission fluid	45L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	8.2L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1560697020	







L5040
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.4L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHTA10	
Transmission fluid	45L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	8.2L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1560697020	

L5740HST-C
Service guide

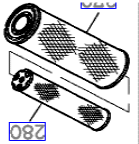

Item	Capacity/quantity	Change interval	Part number	
Engine oil	9.4L	After the first 50 hrs of operation Every 200 hrs	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hrs of operation Every 200 hrs	W21ESO1640	
Fuel filter	1	Check every 100 hrs Replace every 400 hrs	1A00143160	
Air filter outer	1	Clean every 100 hrs Replace every year	TA04093230	
Air filter inner	1	Clean every 100 hrs Replace every year	TA04093220	
Hydraulic filter	1	After the first 50 hrs of operation Every 200 hrs	W21TSHTA10	
Transmission fluid	45L	After the first 50 hrs of operation Replace every 400 hrs	SUPER UDT	
Coolant	8.2L	Replace every 2 years	Anti-freeze + clean water mix	
Fan belt	1		1560697020	


Kubota®







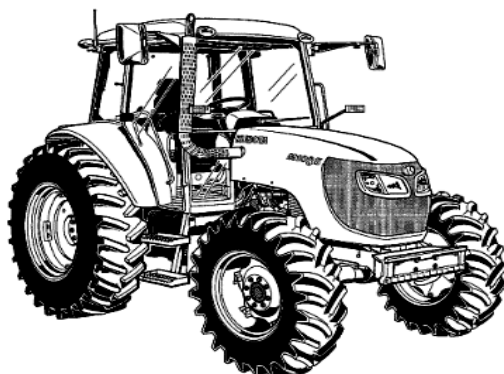


For Earth, For Life
Kubota



M108
Service guide




 

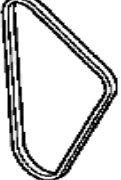
 



Item	Serial number	Capacity/quantity	Change interval	Part number	
Engine oil	N/A	10.7L	After the first 50 hours Every 500 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	< 51503 51504-70720 > 70721	1	After the first 50 hours Every 500 hours	W21ESO1C00	
Fuel filter element	< 51503 51504-70720 > 70721	1	Replace every 500 hours	1583143380 1G31143380 RD45151940	
Fuel filter	< 51503 51504-70720 > 70721	1	Replace every 500 hours	1663143560	
Air filter outer	< 51503 51504-70720 > 70721	1	Replace every year	5970026112	
Air filter inner	< 51503 51504-70720 > 70721	1	Replace every year	5523126150	
Hydraulic filter	< 51503 51504-70720 > 70721	2	Replace every 500 hours	W21TSHTA10	
Aircon belt	N/A	1		3C58179320	
Alternator belt	N/A	1		1G58179320	
Transmission fluid	N/A	60L	Replace every 1000 hours	SUPER UDT	
Coolant	N/A	9.6L	Replace every 2 years	Anti-freeze + clean water mix	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M110
Service guide



Item	Serial number	Capacity/quantity	Change interval	Part number	
Engine oil		10.5L	After the first 50 hours Every 500 hours	15W/40 Ultra active low ash	
Engine oil filter		1	After the first 50 hours Every 500 hours	W21ESO1C00	
Fuel filter		1	Replace every 500 hours	RD45151940	
Fuel filter		1	Replace every 500 hours	W21ESF1660	
Air filter outer		1	Replace every year	5970026112	
Air filter inner		1	Replace every year	5523126150	
Hydraulic filter		1	Replace every 500 hours	HH3Y082590	
Aircon belt	<70259 >70260	1		3C58179320 3Y22579320	
Fan belt	<70259 >70260 >70482	1		3P20015783 3Y22515780 3Y22515782	
Transmission fluid			Replace every 1000 hours	SUPER UDT	
Coolant			Replace every year	Anti-freeze + clean water mix	
Air-con filter		1		6A67175090	
Air-con filter		1		T185571600	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M130
Service guide




 
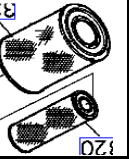



 


Item	Capacity/quantity	Change interval	Part number	
Engine oil	14.6L	After the first 50 hours Every 500 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hours Every 500 hours	W21ESO1G00	
Fuel filter inline	1	Replace every 500 hours	RD451151940	
Fuel pump filter	1	Replace every 500 hours	1G41052300	
Fuel filter	1	Replace every 500 hours	1G41043560	
Air filter outer	1	Replace every year	3P30011220	
Air filter inner	1	Replace every year	3P30011230	
Hyrdraulic filter	2	Replace every 500 hours	W21TSH3300	
Transmission fluid	60L	Replace every 1000 hours	SUPER UDT	
Coolant	15L	Replace every year	Anti-freeze + clean water mix	
Aircon filter open air	2		5224121650	
Aircon filter	1		3T40050320	
Fan belt	1		3P90315780	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M135GX
Service guide










Item	Capacity/quantity	Change interval	Part number	
Engine oil	14.6L	After the first 50 hours Replace every 500 hours	15W/40 Ultra active low ash	
Engine oil filter	1	After the first 50 hours Replace every 500 hours	W21ESO1G00	
Fuel filter separator	1	Replace every 500 hours	1G31143380	
Fuel filter	1	Replace every 500 hours	1J52043060	
Fuel pump filter	1	Replace every 500 hours	1G41052300	
Air filter outer	1	Replace every year	3P30011220	
Air filter inner	1	Replace every year	1J52011222	
Hydraulic filter	1	Replace every 500 hours	HH3Y082590	
Fan belt	1		3P90315780	
Transmission fluid		Replace every 1000 hours	SUPER UDT	
Coolant		Replace every year	Anti-freeze + clean water mix	
Air-con filter	1		6A67175090	
Cab filter	1		T185571600	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M9540N
Service guide










Item	Capacity/quantity	Serial number:	Change interval	Part number	
Engine oil	1		After the first 50 hours Replace every 500 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	S/N: <83396 S/N: >83397	After the first 50 hours Replace every 500 hours	HH1C032430	
Fuel filter	1	S/N: <83396 S/N: >83397	Replace every 500 hours	1583143380 1G31143380	
Fuel filter	1	S/N: <83396 S/N: >83397	Replace every 500 hours	1663143560	
Air filter outer	1	S/N: <83396 S/N: >83397	Replace every year	5970026112	
Air filter inner	1	S/N: <83396 S/N: >83397	Replace every year	5523126150	
Hydraulic filter	2	S/N: <83396 S/N: >83397	Replace every 500 hours	HH3A082623	
Transmission fluid			Replace every 1000 hours	SUPER UDT	
Coolant			Replace every year	Anti-freeze + clean water mix	
Fan belt	1			1G54197010	
Compressor belt				3C58179320	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M9540
Service guide










Item	Capacity/quantity	Serial number	Change interval	Part number	
Engine oil			After the first 50 hours Replace every 500 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1		After the first 50 hours Replace every 500 hours	W21ESO1C00	
Fuel filter	1		Replace every 500 hours	W21ESF1660	
Fuel separator	1	<80851 >80852	Replace every 500 hours	1583143380 1G31143380	
Air filter outer	1		Replace every year	5970026112	
Air filter inner	1		Replace every year	5523126150	
Hydraulic filter	1	<81471 >81472	Replace every 500 hours	W21TSH3300 W21TSHTA10	
Transmission fluid			Replace every 1000 hours	SUPER UDT	
Coolant			Replace every year	Anti-freeze + clean water mix	
Fan belt	1			1G54197010	
Compressor belt				3C58179320	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M9540
Service guide


 

 






Item	Capacity/quantity	Serial number	Change interval	Part number	
Engine oil			After the first 50 hours Replace every 500 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1		After the first 50 hours Replace every 500 hours	W21ESO1C00	
Fuel filter	1		Replace every 500 hours	W21ESF1660	
Fuel separator	1	<80851 >80852	Replace every 500 hours	1583143380 1G31143380	
Air filter outer	1		Replace every year	5970026112	
Air filter inner	1		Replace every year	5523126150	
Hydraulic filter	1	<81471 >81472	Replace every 500 hours	W21TSH3300 W21TSHTA10	
Transmission fluid			Replace every 1000 hours	SUPER UDT	
Coolant			Replace every year	Anti-freeze + clean water mix	
Fan belt	1			1G54197010	
Compressor belt				3C58179320	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M6060
Service guide










Item	Capacity/quantity	Change interval	Part number	
Engine oil	12L	After the first 50 hours Replace every 500 hours	15W/40 Ultra active low ash	
Engine oil filter	1	After the first 50 hours Replace every 500 hours	W21TSHK700	
Fuel separator	1	Replace every 500 hours	RD45151940	
Fuel	1	Replace every 500 hours	W21ESF1660	
Air filter outer	1	Replace every year	5970026112	
Airfilter inner	1	Replace every year	5523126150	
Hydraulic filter	2	Replace every 500 hours	W21TSHTA10	
Oil separator	1	Replace every 500 hours	1j77008510	
Transmission fluid	56L	Replace every 1000 hours	SUPER UDT	
Coolant	9L	Replace every year	Anti-freeze + clean water mix	
Fan belt	1		3C63179322	
Compressor belt			1G77297010	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M8560
Service guide


 

 






Item	Capacity/quantity	Change interval	Part number	
Engine oil	10.7L	After the first 50 hours Replace every 500 hours	15W/40 Ultra active low ash	
Engine oil filter	1	After the first 50 hours Replace every 500 hours	W21ESO1C00	
Fuel separator	1	Replace every 500 hours	RD45151940	
Fuel filter	1	Replace every 500 hours	W21ESF1660	
Air filter outer	1	Replace every year	5970026112	
Airfilter inner	1	Replace every year	5523126150	
Hydraulic filter	2	Replace every 500 hours	W21TSHTA10	
Transmission fluid	60L	Replace every 1000 hours	SUPER UDT	
Coolant	9L	Replace every year	Anti-freeze + clean water mix	
Fan belt	1		1634397012	
Compressor belt			3C65179320	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

M7060
Service guide


 

 





Item	Capacity/quantity	Change interval	Part number	
Engine oil	12L	After the first 50 hours Replace every 500 hours	15W/40 Ultra active low ash	
Engine oil filter	1	After the first 50 hours Replace every 500 hours	W21TSHK700	
Fuel separator	1	Replace every 500 hours	RD45151940	
Fuel	1	Replace every 500 hours	W21ESF1660	
Air filter outer	1	Replace every year	5970026112	
Airfilter inner	1	Replace every year	5523126150	
Hydraulic filter	2	Replace every 500 hours	W21TSHTA10	
Oil separator	1	Replace every 500 hours	1j77008510	
Transmission fluid	56L	Replace every 1000 hours	SUPER UDT	
Coolant	9L	Replace every year	Anti-freeze + clean water mix	
Fan belt	1		3C63179322	
Compressor belt			1G77297010	

Please note: **The above service intervals are only valid when using Kubota genuine oils and filters.**

M9960
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	10.7L	After the first 50 hours Replace every 500 hours	15W/40 Ultra active low ash	
Engine oil filter	1	After the first 50 hours Replace every 500 hours	W21ESO1C00	
Fuel separator	1	Replace every 500 hours	RD45151940	
Fuel filter	1	Replace every 500 hours	W21ESF1660	
Air filter outer	1	Replace every year	5970026112	
Airfilter inner	1	Replace every year	5523126150	
Hydraulic filter	2	Replace every 500 hours	W21TSHA10	
Transmission fluid	60L	Replace every 1000 hours	SUPER UDT	
Coolant	9L	Replace every year	Anti-freeze + clean water mix	
Fan belt	1		1634397012	
Compressor belt	1		3C65197012	

Please note: The above service intervals are only valid when using Kubota genuine oils and filters.

Kubota®




 




For Earth, For Life
Kubota



RTV400
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.6L	After the first 20 hours Replace every 100 hours	5W/30 Fully synthetic API of: SG,SH,SJ or higher	
Engine oil filter	1	After the first 20 hours Replace every 100 hours	W21ESO1500	
Fuel Vapour carbon filter	1	N/A	K731124143	
Air cleaner	1	Replace every year	K721182130	
Spark plug	1		E717970090	
CVT air cleaner	1	Replace every year	6C06099410	
CVT belt	1		K721114780	



RTV500
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	1.35L	After the first 50 hours Replace every 200 hours	10W/40 Mineral API of SG,SH,SJ or higher	
Engine oil filter	1	After the first 50 hours Replace every 200 hours	W21ESO1500	
Fuel Vapour carbon filter	1	N/A	K731124163	
Air filter outer	1	Replace every year	6C06099410	
Airfilter inner	1	Replace every year	3272158242	
Oil cooler	1	After the first 50 hours Replace every 200 hours	W21TSHK700	
HST return filter Orange	1	After the first 50 hours Replace every 200 hours	W21TSHK710	
Spark plug	2		E915167710	
Transmission case fluid	8.5L	After the first 50 hours Replace every 200 hours	SUPER UDT	
Coolant	1.8L		Anti-freeze + clean water mix	
Fan belt	1		EG67397032	








RTV900
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.1L	After the first 50 hours Replace every 200 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hours Replace every 200 hours	W21ESO1500	
Fuel filter inline	1	Replace every 500 hours	1258143013	
Air filter outer	1	Replace every year	TA04093230	
Airfilter inner	1	Replace every year	TA04093220	
HST return filter Yellow	1	After the first 50 hours Replace every 200 hours	W21TSHK700	
HST return filter Orange	1	After the first 50 hours Replace every 200 hours	W21TSHK710	
Transmission case fluid	10L	After the first 50 hours Replace every 200 hours	SUPER UDT	
Coolant	4.0L		Anti-freeze + clean water mix	
Fan belt	1		1759497010	

RTV-X900
Service guide



Item	Capacity/quantity	Change interval	Part number	
Engine oil	3.1L	After the first 50 hours Replace every 200 hours	SAE20, SAE 10W-30 or 15W-40 25°C + API OF CF OR HIGHER	
Engine oil filter	1	After the first 50 hours Replace every 200 hours	W21ESO1500	
Fuel filter inline	1	Replace every 500 hours	6A32059930	
Air filter outer	1	Replace every year	1G31911210	
Airfilter inner	1	Replace every year	K759182360	
HST return filter Yellow	1	After the first 50 hours Replace every 200 hours	W21TSHK700	
HST return filter	1	After the first 50 hours Replace every 200 hours	W21TSH3A10	
Transmission case fluid	7.0L	After the first 50 hours Replace every 200 hours	SUPER UDT	
Coolant	6.1L		Anti-freeze + clean water mix	
Fan belt	1		1759497010	

RTV1140
SERVICE GUIDE



Item	Capacity/quantity	Change interval	Part number	
Engine oil	4.1L	After the first 50 hours Replace every 200 hours	SAE20, SAE 10W-30 or 15W-40 - 0 to 25°C	
Engine oil filter	1	After the first 50 hours Replace every 200 hours	HH15032094	
Fuel filter inline	1	Replace every 500 hours	1258143013	
HST filter SUC (orange)	1	After the first 50 hours Replace every 200 hours	W21TSHK710	
Air filter outer	1	Replace every year	TC02016320	
Airfilter inner	1	Replace every year	T027093220	
HST return filter (yellow)	2	After the first 50 hours Replace every 200 hours	W21TSHK700	
Transmission case fluid	11L	Replace every 400 hours	SUPER UDT	
Coolant	5.2L	Replace every year	Anti-freeze + clean water mix	
Hydraulic tank oil	16L	Replace every 200 hours		
Fan belt	1		1620697013	